



CARE . TRUST . RESPONSIBILITY

Version 1.1

With a USB-floppy-drive:

You can use the boot floppy-disk from Windows 98, but it require a USB-floppy-drive. You can download from these side a file, to create such kind of floppy-disk:


<http://www.bootdisk.com/bootdisk.htm>

Copy the BIOS-files to another floppy-disk. Boot from the Dos-boot-disk, change the floppy-disk and run the file "update.bat". After the update is finished, load at the bios the "factory-default" and "optimized default". And check the setting.

With a bootable USB-drive:

To make your USB-drive bootable, you can use the "HP USB-Storage Format Tool" tool for it, which you can get here:

<http://www.softpedia.com/get/System/Hard-Disk-Utills/HP-USB-Disk-Storage-Format-Tool.shtml>

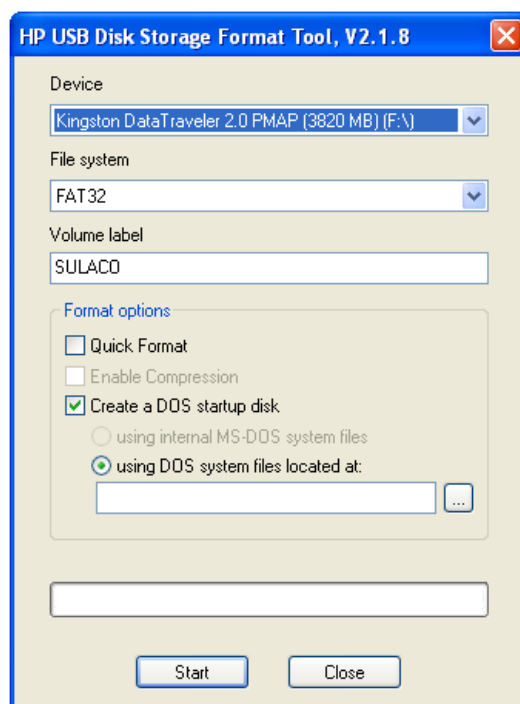

CARE . TRUST . RESPONSIBILITY



CARE . TRUST . RESPONSIBILITY

You are needing the files from a DOS-start-disk (You can download these files for your reference).

ftp://213.239.207.144/Software-Utilities/Windows_98_boot-disk_files.zip

Unzip these files to a folder and install the HP USB-Storage Format tool.

Format your USB-Stick as Fat or FAT32 and check the option "Create a DOS startup disk" and select as source the attached files.

After it is finished, copy the BIOS-files to your USB-drive and boot from it.

If you are in dos mode, please run the file "update.bat" and wait until the completion.

After the update is finished, load at the bios the "factory-default" and "optimized default". And check the setting.